



**BANDITS**

**USER MANUAL**



# CONTENTS

CONNECTION DIAGRAM.....	1
DIP SWITCH SETTING.....	3
36 & 10 PIN BUTTON LAYOUT.....	4
BOOKKEEPING & ADJUSTMENT.....	5
ON-SCREEN SYSTEM SETTING.....	6
TOUCH SCREEN CALIBRATION.....	9
MAIN FEATURES.....	10
HOW TO PLAY.....	11



## CONNECTION DIAGRAM (36 & 10 pins)(6 BUTTONS)

36 Pins	
PARTS SIDE	SOLDER SIDE
	1
	2
SPEAKER	GND
	4
	5
	6
TICKET OUT	7
TICKET SWITCH	8
START/ALL STOP	9
STOP4/SMALL/HELP	10
STOP5/PLAY	11
STOP1/TAKE	12
STOP3/DOUBLE/SELECT LINE	13
	14
	15
STOP2/HOLD PAIR/BIG	16
	17
COIN A	KEY IN
	COIN C
BOOK	TEST
	KEY OUT/PRINTER OUT
	22
COIN A METER	23
KEY IN METER	24
	25
COIN C METER	26
OUT METER	27
	28
LAMP: START/ALL STOP	29
LAMP: STOP4/SMALL/HELP	30
LAMP: STOP5/PLAY	LAMP: COUNT
LAMP: STOP1/TAKE	32
LAMP: STOP3/DOUBLE/SELECT LINE	33
LAMP: STOP2/HOLD PAIR/BIG	34
	35
GND	GND


10 Pins		
PARTS SIDE		SOLDER SIDE
GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
+12V	5	+12V
	6	
TICKET SSR	7	
	8	
	9	
GND	10	GND

## DIP SWITCH SETTING

【REMARK】 Please reset after adjusting **LINER SELECT**.

DIP SWITCH 1		1	2	3	4	5	6	7	8
TOUCH FUNCTION	YES	ON							
	NO	OFF							
AUTO PLAY	YES		ON						
	NO		OFF						
LINER SELECT	25			ON					
	9			OFF					


## 36 & 10 PIN BUTTON LAYOUT

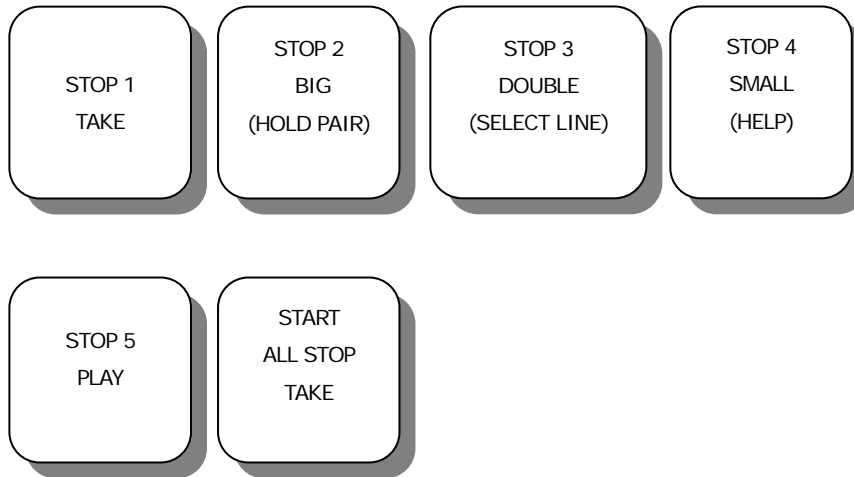




# BOOKKEEPING & ADJUSTMENT

## BOOKKEEPING FLOW

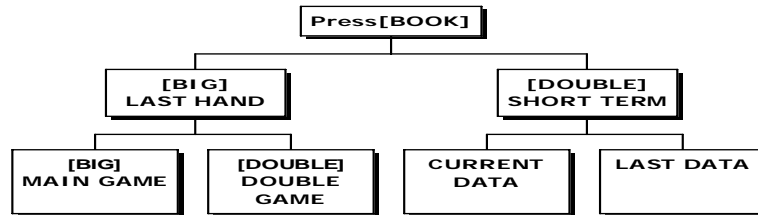

## DATA SETTING FLOW

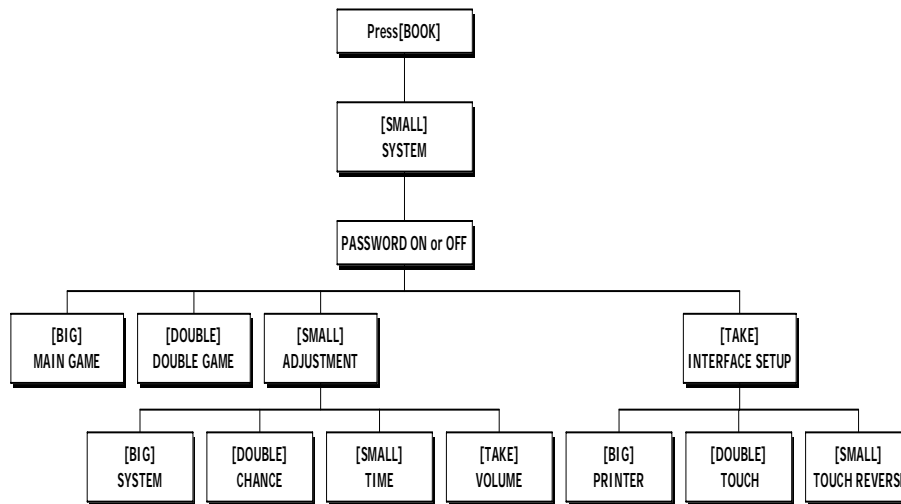

- Default Password of System Setup: press [START] 8 times.

# ON-SCREEN SYSTEM SETTING SYSTEM SETUP

Press [BOOK]→[SMALL]→[SMALL]→[BIG] to select the following items.

CONTENT	SETTING SELECTION	DEFAULT
MAX. PLAY/LINE (25)	2, 4, 8, 10, 15, 20	20
MAX. PLAY/LINE (9)	5, 10, 20, 30, 40, 50	50
MIN. PLAY/TOTAL	1, 5, 7, 9, 10, 15, 20, 25	9
MIN.PLAY FOR JACKPOT	1, 3, 5, 9, 10, 15, 18, 25	9
COIN RATE	1, 2, 4, 5, 10, 15, 20, 25, 30, 40, 50, 60, 75, 80, 100, 200, 250, 400,500, 1000	25
KEY IN RATE		100
KEY OUT RATE		1
TICKET RATE		500
GAME TICKET	1, 2, 3, 4, 5, 8, 10, CONTINUOUS	CONTINUOUS
INTERFACE	DISPENSER, PRINTER, ATTENDANT	DISPENSER
PRINTER COMMAND	CBM1, ESC/POS, STAR	CBM1
SYSTEM LIMIT	NO, YES	NO
AUTO TICKET	NO, YES	NO
DEMO MUSIC	NO, YES	YES
NON STOP	NO, YES	NO
PASSWORD	NO, YES	NO
ODDS TABLE	NO, YES	YES

CONTENT	SETTING SELECTION	DEFAULT
SCORE BOX	NO, YES, 10X	NO
PLAY SCORE	NO, YES	YES
HAND COUNT	NO, YES	NO
HOLD PAIR	NO, REGULAR, SKILL	NO
DOUBLE GAME	NO, YES	YES
JACKPOT 1 MODE	PROGRESS, RANDOM	PROGRESS

REMARK:

1. Printer only can be driven when connecting to the RS-232 port.
  2. The interface board of ticket dispenser can be driven by connecting to the 7th pin on the Part Side of 10 pins (on 36 & 10 pins diagram). See page 1.
- Default Password of System Setup: press [START] 8 times.

# CHANCE ADJUSTMENT



Press [BOOK]→ [SMALL] → [SMALL] → [DOUBLE] to select the following items.

CONTENT	SETTING SELECTION	DEFAULT
MAIN GAME LEVEL	LEVEL 1 (easiest), LEVEL 2, LEVEL 3, LEVEL 4, LEVEL 5, LEVEL 6 (hardest)	LEVEL 6
DOUBLE GAME LEVEL	95%, 90%, 85%	95%

# TOUCH SCREEN CALIBRATION

1. Press [LONG TREM] → [PASSWORD] → [TAKE] → [BIG] to enter TOUCH SCREEN CALIBRATION.
2. Touch center of the cross on the screen for 3 seconds.
3. Follows the cross when it moves till the calibration is completed.

## ◆ OPEN TOUCH

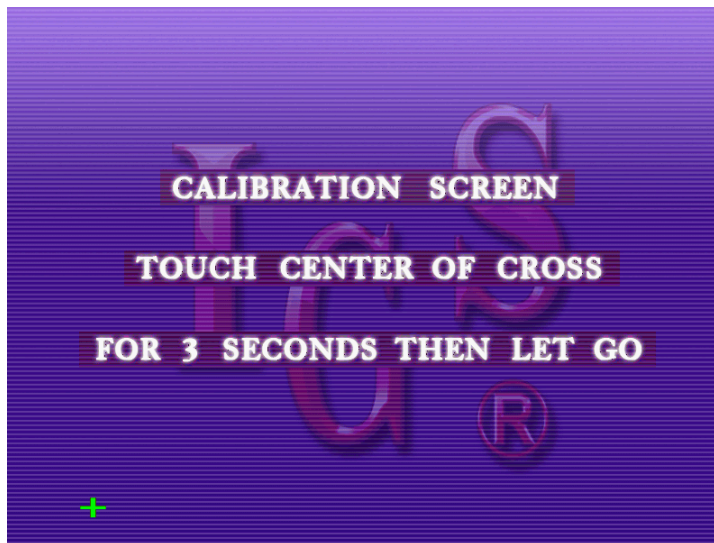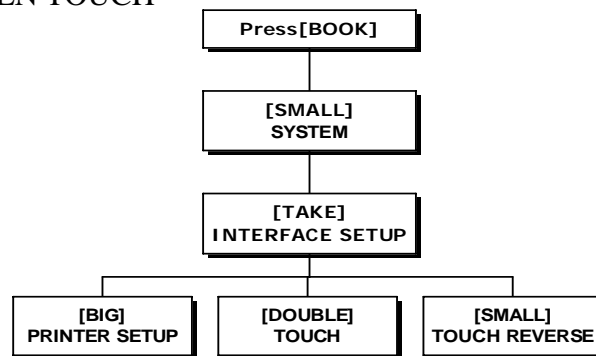

## MAIN FEATURES

- ◆ 9 / 25-liner adjustable.
- ◆ Max. Win up to 300,000 (in 25-liner setting).
- ◆ 1 set of progressive Jackpot and 2 sets of random Jackpot. If 5/4/3 Jackpot Symbols are in line, players can get Jackpots 1/2/3 depending on the JP symbol.
- ◆ Higher wagers encouragement: Win paid from left to right and right to left when matches the criteria.
- ◆ Hold Pair Feature: Select the desired Hold Symbol and Re-spin the symbols you don't want. Press Hold-Pair button to swap the Symbols.
- ◆ 5~20 free games: Free games will be triggered when correct symbols show up.
- ◆ Touch screen / Auto play support.

# HOW TO PLAY

## MAIN GAME DESCRIPTIONS

**BANDITS** is a 15-reel & 25/9-lines game with 3 different bonus games.



**BANDITS Main Screen**

# Pay Chart

- Line-up Pattern: 9-liner

Line 1	Line 2	Line 3
Line 4	Line 5	Line 6
Line 7	Line 8	Line 9

- Line-up Pattern: 25-liner

Line 1	Line 2	Line 3	Line 4	Line 5
Line 6	Line 7	Line 8	Line 9	Line 10
Line 11	Line 12	Line 13	Line 14	Line 15
Line 16	Line 17	Line 18	Line 19	Line 20
Line 21	Line 22	Line 23	Line 24	Line 25



## Encouraging higher wagers

### (1) 9 Liner

#### I. JP

MIN TOTAL PLAY FOR JP	JACKPOT
<b>9</b>	<b>2XJACKPOT BASE</b>
<b>18</b>	<b>3XJACKPOT BASE</b>
<b>27</b>	<b>4XJACKPOT BASE</b>
<b>36</b>	<b>5XJACKPOT BASE</b>

#### II. Win paid from left to right and right to left

PLAY LINES	LINE PLAY	TOTAL PLAY	WIN LINES
<b>9</b>	<b>2</b>	<b>18</b>	<b>1 - 3</b>
<b>9</b>	<b>3</b>	<b>27</b>	<b>1 - 6</b>
<b>9</b>	<b>4</b>	<b>36</b>	<b>1 - 9</b>

### (2) 25 Liner




#### I. JP

MIN TOTAL PLAY FOR JP	JACKPOT
<b>9</b>	<b>JACKPOT BASE</b>
<b>50</b>	<b>2XJACKPOT BASE</b>



#### II. Win paid from left to right and right to left


 
PLAY LINES	LINE PLAY	TOTAL PLAY	WIN LINES
<b>25</b>	<b>1</b>	<b>25</b>	<b>1 - 10</b>
<b>25</b>	<b>2</b>	<b>50</b>	<b>1 - 25</b>


 
## Jackpot

 <p>JACKPOT 1</p>	<p>Five-in-line wins 100% of Jackpot 1;            Four-in-line wins 50% of Jackpot 2;            Three-in-line wins 25% of Jackpot 3.</p>
 <p>JACKPOT 2</p>	<p>Five-in-line wins 100% of Jackpot 1;            Four-in-line wins 50% of Jackpot 2;            Three-in-line wins 25% of Jackpot 3.</p>
 <p>JACKPOT 3</p>	<p>Five-in-line wins 100% of Jackpot 1;            Four-in-line wins 50% of Jackpot 2;            Three-in-line wins 25% of Jackpot 3.</p>

## Free Game

1. With  and  next to each other left to right, the player gets a Free

Game. Select cards to play the free game (5  and 5 ).

- Select one  to get the play number in the free game.
- All wins during the free game will be multiplied by the () selected.




Screen of Free Game



Screen of Free Game

## Bonus Game



Get 3 or more  symbols on the screen, and enter the Bonus Game.

### ■ Bonus Game 1 : HUNTING REWARD

- ◆ Select one from 9 question marks to start the game. Three successful arrests of the same criminals will get you extra wins.
- ◆ A maximum of six play times.



Bonus Game 1 Screen

## ■ Bonus Game 2 : BINGO

- ◆ Select one item from the screen to start the game. If the selected item can be linked and create a line in the bingo game on the left, a bonus is given and the player will return to main game.



Bonus Game 2 Screen

■ Bonus Game 3 : JEWELS HUNTING

- ◆ Select 1 through 9 options to win prize. Game ends by selecting bomb graphic.



Bonus Game 3 screen

## Double Game

After winning the Main game or Bonus game, player can press “DOUBLE UP” button to play Double game.

- Player can press “DOUBLE UP” button to select one of five pokers from the lower row. Then, press “BIG” or “SMALL” to guess it's bigger or smaller than the poker highlighted.
- If it's the correct guess, the player gets double win. If not, the game ends.



Double Up Game Screen

## Odds Table



Screen of Odds Table